








Each product contains

No.	Pictures	Quantity
①		1
②		1
③		2
④		2

No.	Pictures	Quantity	Extra
⑤		4	1
⑥		4	1
⑦		4	1

 6mm X1


 4mm X1

LZ-12W




Assembly Instructions

1

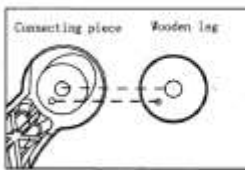

! Be sure each wooden leg must be aligned to the right positioning hole then fixed screw. Ensure the correct angle.

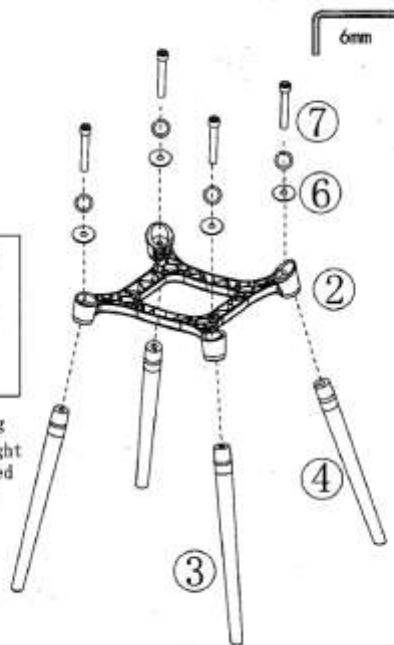

2

